



CAUTION:

- THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE RESPECT OF THE EXISTING RULES FOR THE ELECTRICAL SYSTEMS, AND WITH THE APPROPRIATE USE OF THESE INSTALLATION INSTRUCTIONS, THEREFORE IT IS NECESSARY TO KEEP THEM.
- THE IMPROPER USE OF THIS PRODUCT IS FORBIDDEN; ANY TAMPERING WITH THE PRODUCT OR MODIFICATION OF THE PRODUCT THAT IS NOT AUTHORIZED BY MARECO LUCE CAN CAUSE DAMAGE TO PEOPLE, ANIMALS OR THINGS, AND WILL VOID ANY WARRANTY OR LIABILITY.
- THE QUICK CONNECTION SYSTEM CLICK MUST BE USED IN COMBINATION WITH ONE OF THE LUMINAIRES OF THE CLICK&LIGHT SERIES (THE CLICK MUST BE PURCHASED SEPARATELY ONLY FOR THE VERSION WITH MOTION SENSOR).
- SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- THE PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE BEST PRACTICE.
- IN CASE OF DAMAGED COMPONENTS, PLEASE REPLACE THE FITTING.
- THE LIGHTING SOURCE OF THIS LUMINAIRE MUST BE REPLACED BY THE MANUFACTURER ONLY.
- THE BATTERY IS SUPPLIED DISCONNECTED. AT THE END OF THE INSTALLATION THE BATTERY MUST BE RECHARGED FOR AT LEAST 30 HOURS SO THAT THE SYSTEM CAN ENSURE THE DECLARED UPTIME.
- THE PRODUCT MUST BE POWERED ONLY WITH THE ORIGINAL BATTERY. DO NOT USE NON-ORIGINAL BATTERIES.
- IN ORDER TO GUARANTEE THE 3H UPTIME THE BATTERY MUST BE RECHARGED FOR 24 HOURS.
- THE IP65 PROTECTION RATE IS VALID ONLY WHEN THE LUMINAIRE IS SECURED TO THE CLICK BASE.

GENERAL MAINTENANCE RECOMMENDATIONS:

- BEFORE CONDUCTING ANY MAINTENANCE DISCONNECT ALL POWER SUPPLIES, INCLUDING THE BATTERY
- CLEAN THE LUMINAIRE PERIODICALLY TO REMOVE ANY DIRT DEPOSIT ON THE DIFFUSER.
- CHECK THE INTEGRITY OF THE COMPONENTS: REPLACE THEM IN CASE OF DAMAGE BY USING ONLY MARECO LUCE ORIGINAL SPARE PARTS.
- CHECK THE INTEGRITY AND THE FLEXIBILITY OF THE GASKETS, WHICH DO NOT HAVE TO HARDEN.
- DO NOT REMOVE OR TAMPER WITH THE CABLE HOLE SO AS NOT TO JEOPARDIZE THE IP RATE OF THE LUMINAIRE.
- TO OBTAIN THE MAXIMUM EFFICIENCY OF THE BATTERY, MAKE SURE TO CARRY OUT AT LEAST EVERY 3 MONTHS A DISCHARGE AND RECHARGE CYCLE.
- REPLACE THE BATTERIES EVERY 4 YEARS OR AFTER 500 DISCHARGE AND RECHARGE CYCLES OR IF THE BATTERIES DO NOT ENSURE THE RATED UPTIME AFTER THE CHARGING CYCLE.
- AMBIENT TEMPERATURE RANGE 5÷45°C.

Use and maintenance instructions
CLICK&LIGHT RANGE OF CEILING LIGHTS

Light fitting including the quick connection system CLICK and a luminaire of the CLICK & LIGHT series with 3h permanent emergency and/or motion sensor

TECHNICAL DETAILS: please refer to the product label

FOR YEAR, MONTH OF PRODUCTION, CHARACTERISTICS AND PARAMETERS: PLEASE REFER TO THE PRODUCT LABEL

FAST, FAST PLUS, FAST MAX, FAST MAX PLUS, SNAP, SNAP PLUS, SIMPLY, SIMPLY PLUS

 
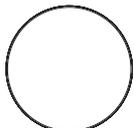
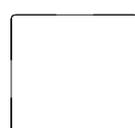
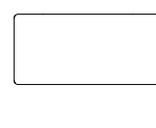
 The UE declaration of conformity can be downloaded from our website www.marecoluce.it

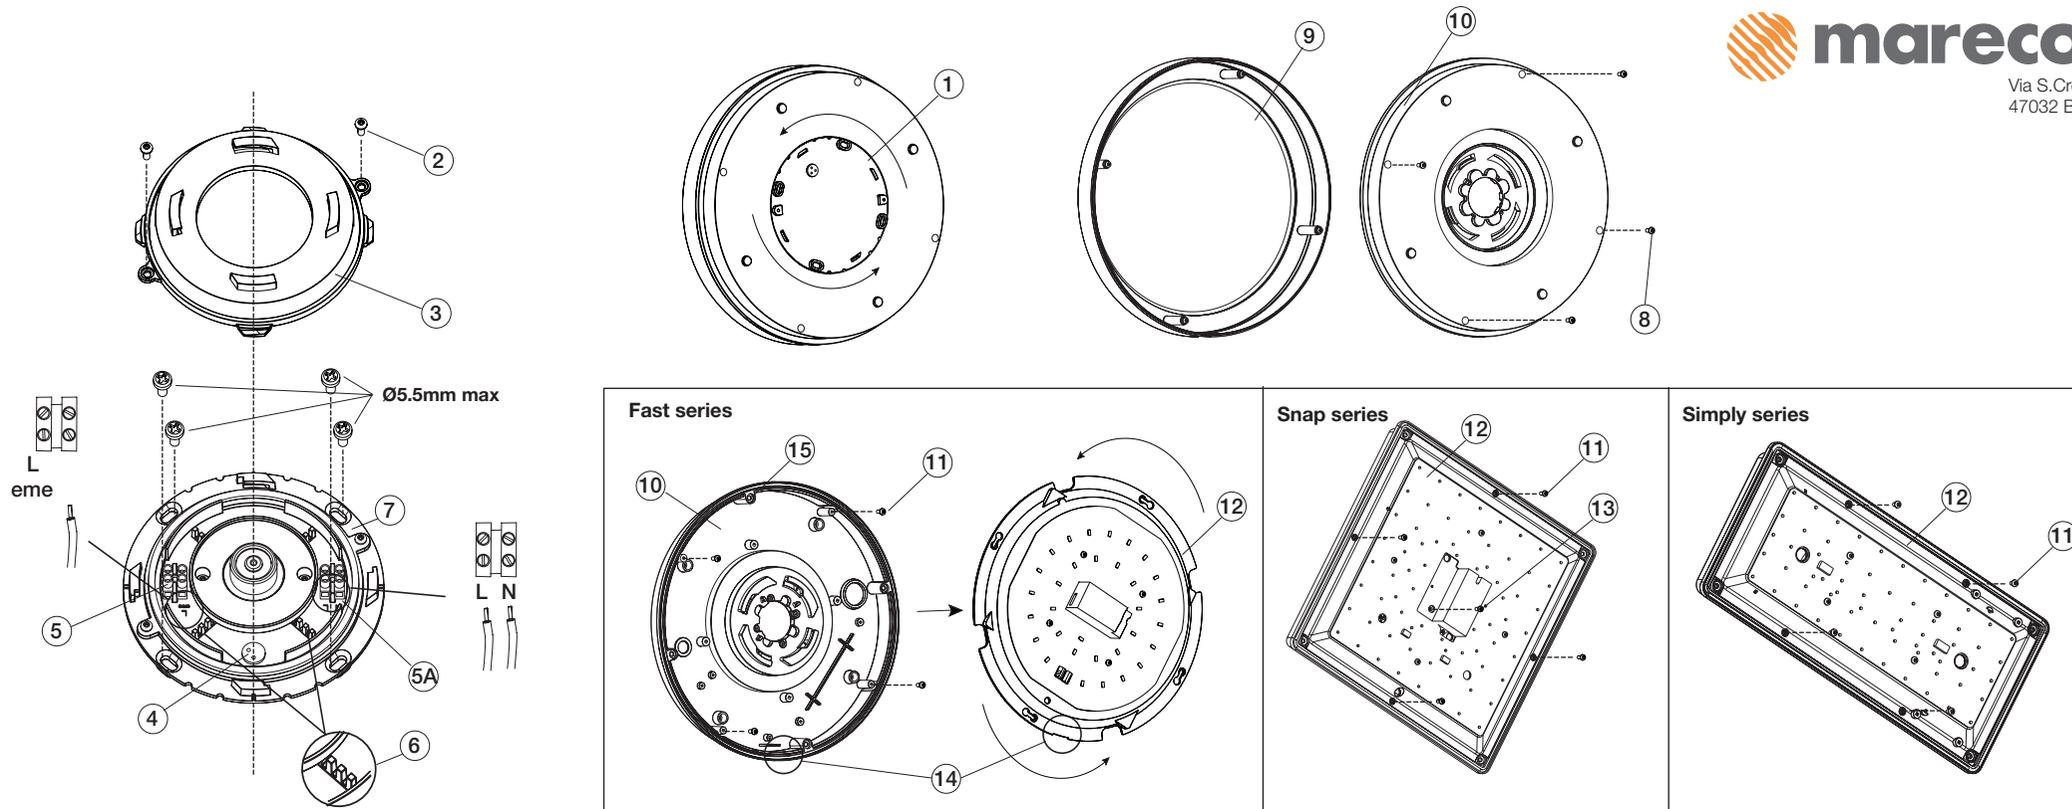
 Insulation class II

IP65 Protection degree against dust ingress, solid particles, moisture

 Caution, risk of electrical shock. The lighting source of this luminaire must be replaced by the Manufacturer only

 This product must not be disposed as a normal household waste

Size in mm			
Fast Fast Plus	Fast Max Fast Max Plus	Snap Snap Plus	Simply Simply Plus
Ø300x95	Ø400x105	300x300x90	350x166x80
			
			



INSTALLATION INSTRUCTION (EMERGENCY VERSION AND EMERGENCY WITH SENSOR):

1. Remove the luminaire from the CLICK (1) by turning it clockwise.
2. Loosen the screws (2).
3. Remove the CLICK cover cap (3) by turning it anti-clockwise.
4. Insert each single wire into the open cable holes (4). Open the third cable hole (4) and connect the emergency-line cable to the terminal block (5) as shown in the picture.
CAUTION: The outer diameter of the single wires must not exceed 3 mm and their nominal thickness must be between 0,5 and 2,5 sqmm
5. Connect the conductors to the terminal block (5) by blocking each wire in the relevant compartment (6).
6. Fix the base of the CLICK (7) to the wall/ceiling by using the screws and expanders (NOT included in the packaging).
CAUTION: use the reference notches on the CLICK (7) to install the models SNAP and SIMPLY in the desired position (see pict.1).
7. Insert the CLICK upper cover (3) by rotating it clockwise until it stops and then tighten the screws (2).
8. Take the luminaire, loosen the screws (8) and remove the diffuser (9) from the base (10).
9. For models with motion sensor, program the sensor by setting the switches for the desired parameters (please refer to the enclosed sensor programming instructions).
10.
 - Fast Series:** loosen the screws (11) on the base of the luminaire (10) and remove the wiring tray (12) by turning it anti-clockwise.
 - Snap Series:** untighten the screws (11) and the screw (13) and remove the wiring tray (12).
 - Simply Series:** untighten the screws (11) and remove the wiring tray (12).
11. Connect the batteries' cable connector to the inverter and fill in the label with the operation start placed on the batteries.
12. Put the wiring tray back in its position (12); for the Fast series use the reference notch (14) placed on the base (10) and turn the wiring tray (12) clockwise until it stops.
13. Tighten the screws (11).
14. Insert the diffuser (9) by the matching the fixing points (15) placed on the base (10) and by paying attention to the gaskets on the fixing screws (8).
15. Tighten the screws (8).
16. Place the luminaire on the CLICK (1) and turn it clockwise until it stops.

INSTALLATION INSTRUCTIONS (version with MOTION SENSOR)

1. Take the luminaire, loosen the screws (8) and remove the diffuser (9) from the base (10).
2. Program the sensor by setting the switches for the desired parameters (please refer to the sensor programming instructions)
3. Insert the diffuser (9) by the matching the fixing points (15) placed on the base (10) and by paying attention to the gaskets on the fixing screws (8).
4. Tighten the screws (8).
5. Place the luminaire on the CLICK (1), NOT included with the luminaire, and turn it clockwise until it stops.

