

## Use and maintenance instructions.

### Versus UP&DOWN R7S


Fixed luminaire for general use for wall installation.

TECHICAL DETAILS: please refer to the product label.

 The UE declaration of conformity can be downloaded from our website [www.marecoluce.it](http://www.marecoluce.it).

**IP65** Protection degree against dust ingress, solid particles, moisture.

 This product must not be disposed as a normal household waste.

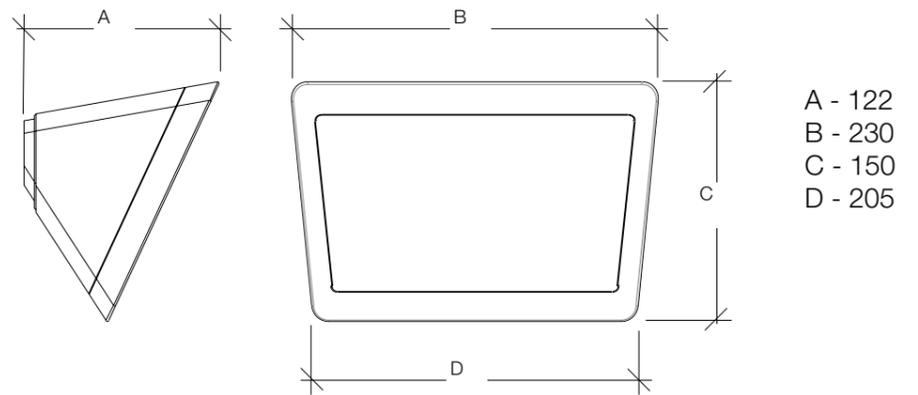


### WARNINGS:

- THE SAFETY OF THIS PRODUCT IS GUARANTEED ONLY WITH THE RESPECT OF THE EXISTING RULES FOR THE ELECTRICAL SYSTEMS, AND WITH THE APPROPRIATE USE OF THESE INSTALLATION INSTRUCTIONS, THEREFORE IT IS NECESSARY TO KEEP THEM.
- THE IMPROPER USE OF THIS PRODUCT IS FORBIDDEN; ANY TAMPERING WITH THE PRODUCT OR MODIFICATION OF THE PRODUCT THAT IS NOT AUTHORISED BY MARECO LUCE CAN CAUSE DAMAGE TO PEOPLE, ANIMALS OR THINGS, AND WILL VOID THE WARRANTY LIABILITY.
- SWITCH OFF THE ELECTRICITY BEFORE CONDUCTING ANY KIND OF MAINTENANCE.
- THE PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH BEST PRACTICE.
- DAMAGED COMPONENTS MUST BE REPLACED WITH MARECO LUCE ORIGINAL COMPONENTS BEFORE PUTTING BACK THE LUMINAIRE INTO SERVICE.

### GENERAL MAINTENANCE RECOMMENDATIONS:


- CLEAN THE LUMINAIRE PERIODICALLY TO REMOVE POSSIBLE DIRT DEPOSITS THAT MAY DAMAGE OR ALTER THE PHOTOMETRICS PERFORMANCE.
- DO NOT USE HARSH DETERGENTS, ABRASIVE CLOTHES, HIGH-PRESSURE WASHERS, WATER AT A TEMPERATURE HIGHER THAN 60°C TO CLEAN THE LUMINAIRE.
- CHECK THE FIXING OF THE LUMINAIRE TO THE WALL.
- CHECK THE INTEGRITY OF THE LUMINAIRE COMPONENTS: REPLACE THEM IN CASE OF DAMAGE BY USING ONLY ORIGINAL MARECO LUCE SPARE PARTS.
- CHECK THE PLASTIC CASINGS CAREFULLY IN ORDER TO IDENTIFY ANY POSSIBLE INSULATION DAMAGE.

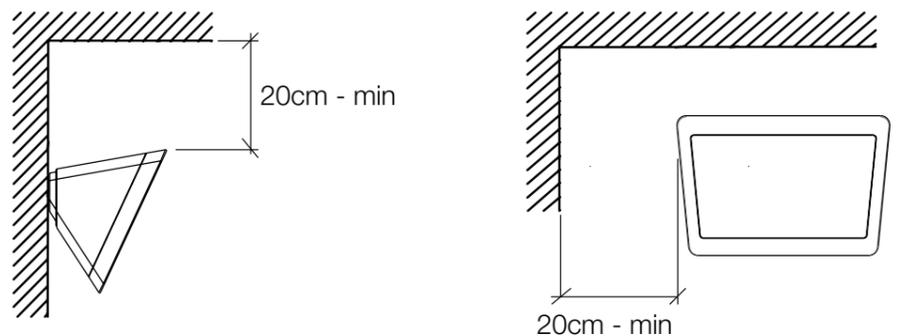

### INSTALLATION INSTRUCTION (WALL INSTALLATION):

1. Unscrew the dowels (1) and remove the front cover (2).
2. Open the blind hole of the grommet (3) then insert it in its seat on the housing (4), paying attention not to damage it.
3. Unsheath and strip the power supply cable as shown in Pict. A, then insert the wires through the holes in the grommet (3);

**ATTENTION:** Use only flexible double sheath power supply cable (type HAR), the external diameter of the single unsheathed cable must be between 3 and 4mm and the internal wires section must be between 1,5 and 2,5 sq. mm.

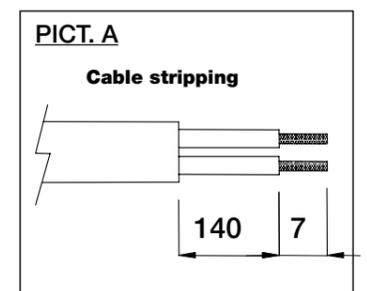

4. Connect the individual conductors to the terminal of the bracket (5) paying attention to respect the polarities and the insulation class of the luminaire.
5. Secure the luminaire to the wall using screws and expansions caps (not included);

**ATTENTION:** Use the suitable screws and expansions caps according to the specific type of installation you are conducting.

6. Insert the caps (6) to protect the screws (7) (not included) to ensure the declared IP rate.
7. Secure the cable with the reed cable-clamp, then fix the bracket by tightening the screws (8). Be careful to store the cable so that it does not cause a lighting defect on the diffuser when the luminaire is turned on.
8. Insert the lamp (not included).
9. Position the front cover (2) and tighten the dowels (1) fully.

